


MODEL 58 POWER TAKE-OFF

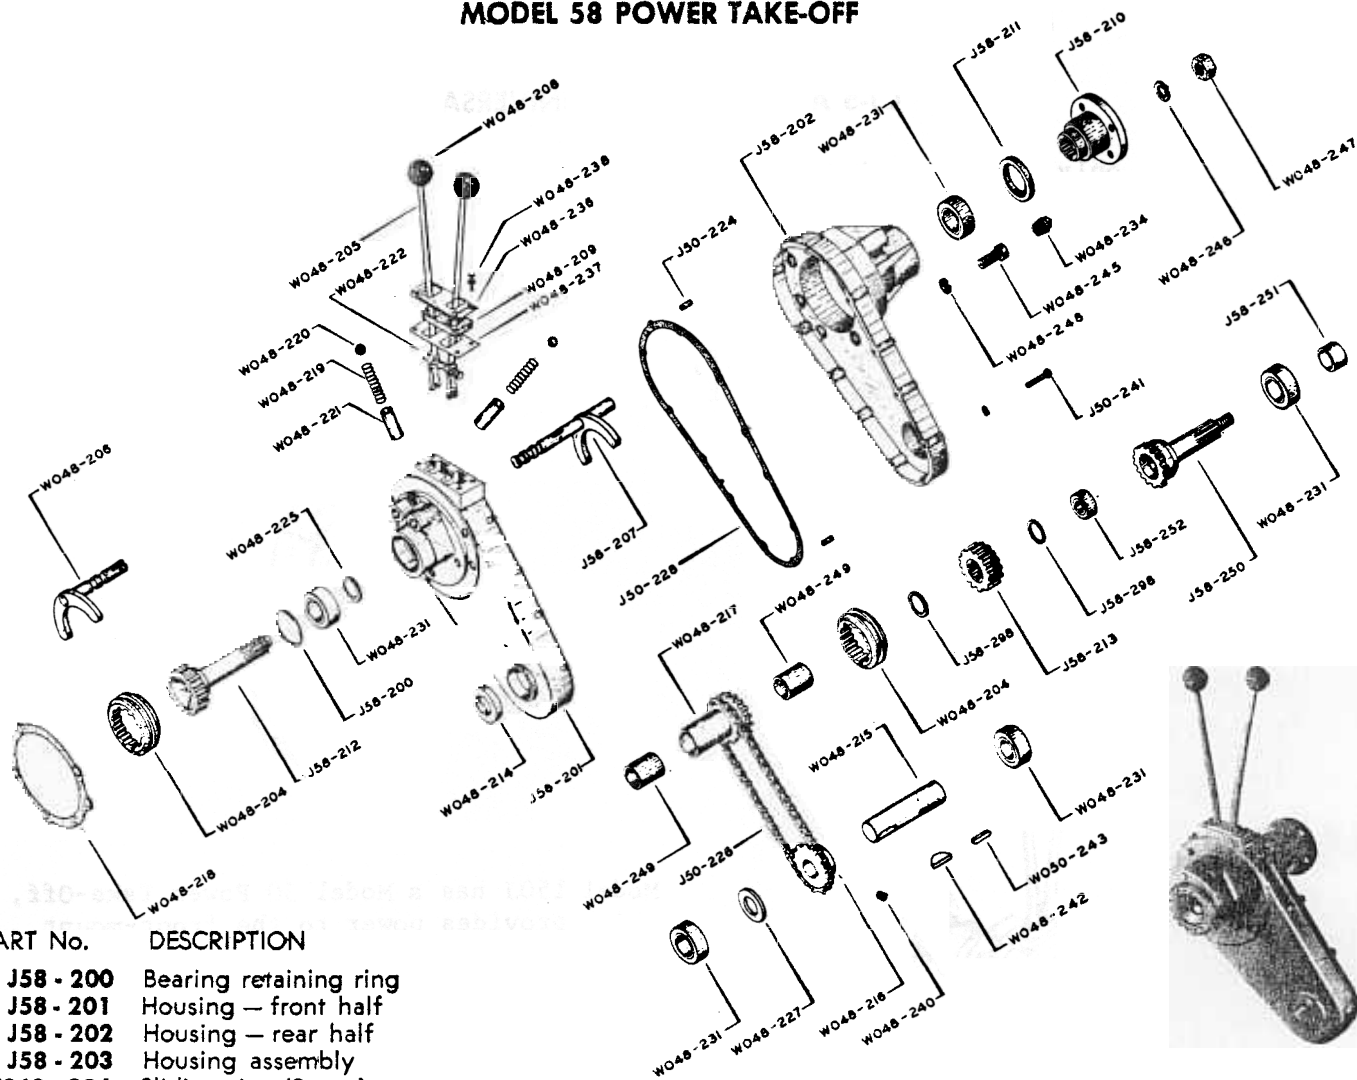

PART No.	DESCRIPTION
J58 - 200	Bearing retaining ring
J58 - 201	Housing — front half
J58 - 202	Housing — rear half
J58 - 203	Housing assembly
W048 - 204	Sliding ring (2 req.)
W048 - 205	Lever (2 req.)
W048 - 206	Shifter to engine
J58 - 207	Shifter for winch or rear drive
W048 - 208	Knobs (2 req.)
W048 - 209	Felt oil retainer for levers
J58 - 210	Coupling
J58 - 211	Oil seal 2 1/4" OD x 1 9/16" ID x 1/4"
J58 - 212	Main P.T.O. shaft
J58 - 213	Drive hub
W048 - 214	Oil seal 1 7/8" OD x 1" ID x 7/16
W048 - 215	P.T.O. Shaft 1" x 3 3/4"
W048 - 216	Sprocket — 16 tooth
W048 - 217	Clutch sprocket hub
W048 - 218	Gasket — between P.T.O. and transmission
W048 - 219	Spring (2 req.)
W048 - 220	Ball (2 req.)
W048 - 221	Bushing for shifter ball and spring (2 req.)
W048 - 222	Pin
J50 - 224	Dowel pins (2 req.)
W048 - 225	Thrust washer 1" x 1 3/8" x .040"
J50 - 226	Roller chain and connecting link
W048 - 227	P.T.O. shaft spacer — 1" x 1 3/4" x .189"
J50 - 228	Gasket between housing halves
W048 - 231	Ball bearing 1" ID (5 req.)
W048 - 234	3/8" Pipe plug (5 req.)
W048 - 236	Top shifter plate
W048 - 237	Bottom shifter plate
W048 - 238	Shifter plate screw and washer (4 req.)
W048 - 239	Connecting link
W048 - 240	Set screw for W048 — 216
J50 - 241	Housing bolt and lock washer (10 req.)
W048 - 242	#15 Woodruff key
W050 - 243	Key 1/4" x 1/4" x 3/16"
W048 - 245	Socket cap screw — 3/8" NC x 1" (5 req.)
W048 - 246	Lock washer
W048 - 247	Hex nut 5/8" NF
W048 - 248	Lock washer — 3/8" Hi-Collar (5 req.)
W048 - 249	Bronze bushing — 1" x 1 1/4" x 1 1/4" (2 req.)
J58 - 250	Rear shaft
J58 - 251	Bearing spacer
J58 - 252	Ball bearing 5/8" ID
J58 - 298	Drive hub retaining ring (2 req.)